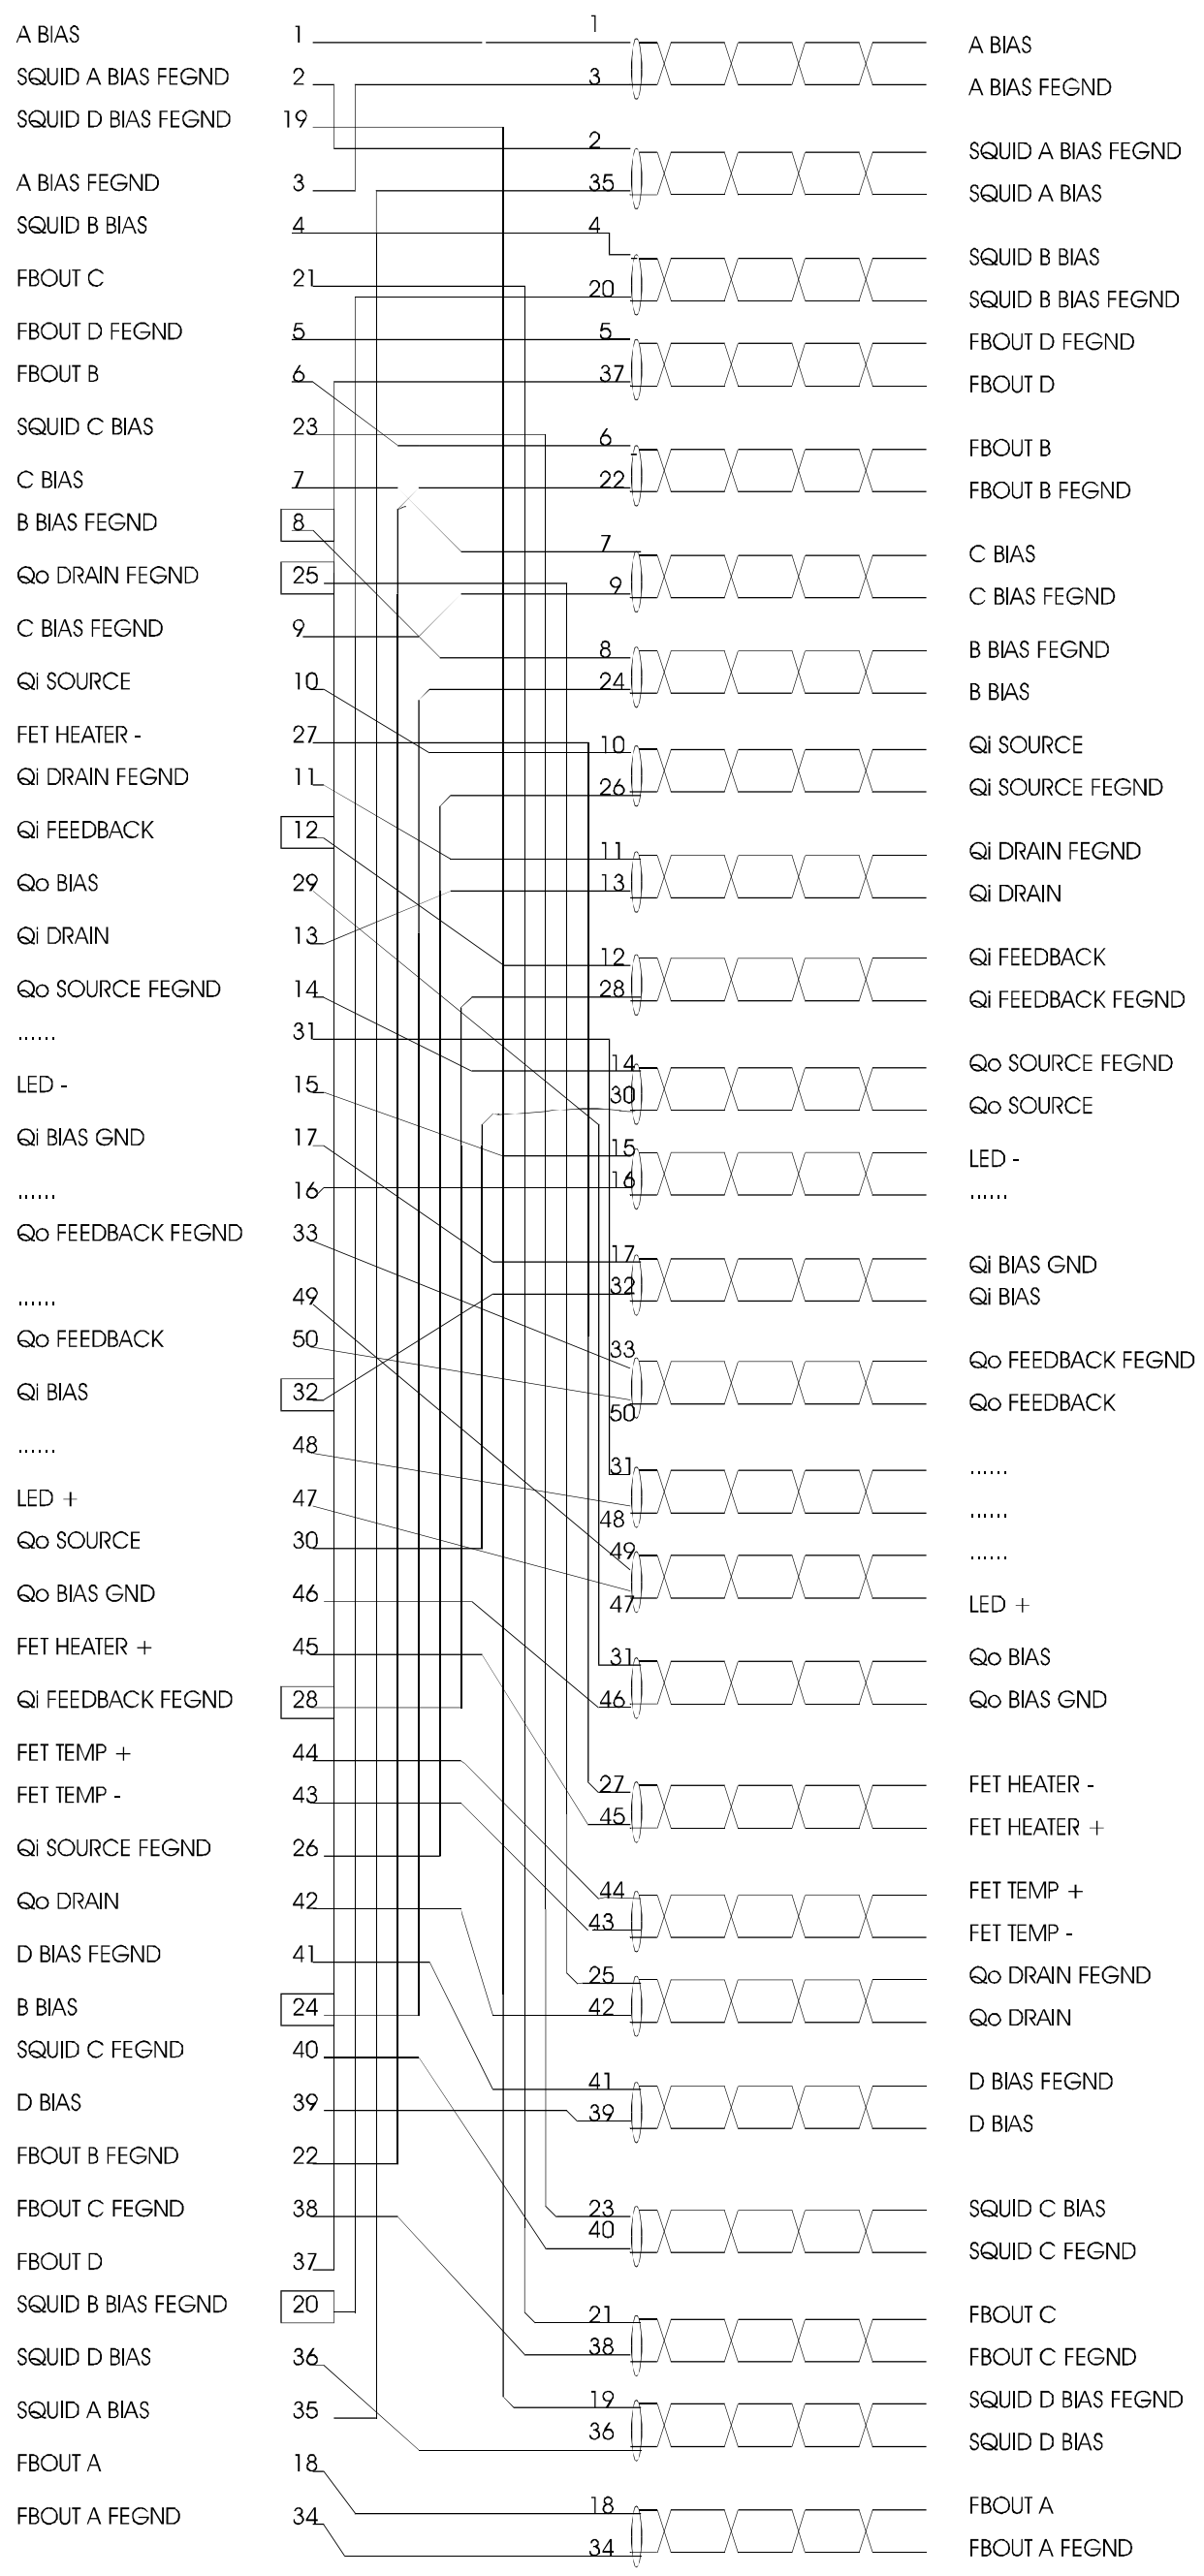

XX = WIDE TRACE, FIRST 100 CM FROM WARM END IS 0.035" WIDE

MERLE HALDEMAN
CHECKED 8/21/98